

QUICK USER GUIDE FOR HONEYWELL PRO A7/PRO A7 PLUS




ARM

1. Click on "Arm Stay" or "Arm Away"
2. Enter 4-digit code

DISARM

1. Click on "Disarm"
2. Enter 4-digit code

CHIME MODE


1. Press the three lines  on the bottom of the home page
2. Click on sensors
3. Then click on the sensors you would like to change to have the chime mode on
4. You can select 3 different chimes or turn off the chime for that sensor/zone

BYPASS

(If the system says "Not Ready to Arm")

1. Press the "Bypass & Arm" icon - this will automatically bypass all zones that are faulted/troubled zones
2. If the "Force Arm Bypass" feature is disabled, select "Bypass ALL"
3. Enter 4-digit code (this will bypass all faulted/troubled zones)


ADDING/DELETING USERS

1. Select the three lines  on the bottom of the home page
2. Scroll down to "Settings"
3. From the right side select "User Management"
4. Enter 4-digit code
5. Select the plus sign (+) to add a user
6. Then proceed to enter the person's name, then save
7. After saving select the "Pencil Box," then put in the 4-digit code you want that person to use
8. Once completed select "Add"
9. **To Delete a User**

(follow the above instructions, then click on the user you would like to remove and delete/remove user)

TESTING SYSTEM

(How to access system testing)


1. Press the three lines  on the bottom of the home page
2. Scroll to "Tools"
3. Enter 4-digit code
4. Select "System Test" > Select "Test Sensors"
5. Select "Start Test" then press "OK"
6. Once the test is complete, select "End Test" > then Save

RESETTING ALARM

(System will display a yellow shield, along with one of the faulted zones)


1. Click on the "Check Sensors," a list of all the sensors will be displayed
2. Select "Problem Sensor" (Check to make sure there are no troubled zones if so clear from there)

(When an alarm goes off, after silencing it, it will ask for a code again to clear the trouble/alarm)

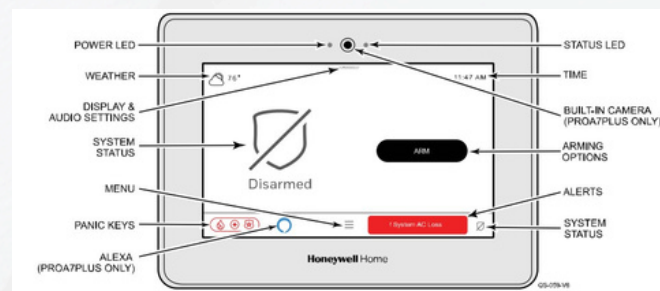

TESTING COMMUNICATION

(How to access system testing)

1. Press the three lines  on the bottom of the home page
2. Scroll to "Tools"
3. Enter 4-digit code
4. Select "System Test" > Select "Test Communicator"
5. Select "Test ALL" then "OK"